



TWSQ 310 CI

USER'S MANUAL





NOTE: This user's guide is adapted to software version v0.1.37 of TWSQ 310 CI dated 04/04/2012.

For future software updates, you can download the user's guide from the following website:
<http://www.ftemaximal.com/>

Chapter 1. Installation.

1.1. Safety Measures

- 1.- Never place the device next to hot sources.
- 2.- Never undergo the device to temperatures that exceed its level of operation.
- 3.- Never expose the device to leakings nor spatterings.
- 4.- Never place objects that contain liquids over the device.
- 5.- Respect the ventilation slots of the device, do not cover them with any kind of object.
- 6.- The space around the device must be free of objects, in a minimum radius of 40cm.
- 7.- Avoid locations with possibilities of spilling liquids on the inside of the device, and with important changes of temperature.
- 8.- Never open the device by yourself due to electric risk. In case of problems, go always to qualified technicians
- 9.- Never, under no circumstances, open the device when connected to the electrical net.
- 10.- During the handling it is better to disconnect the device from the electrical net.
- 11.- Obey the electricity security rules during the assembling. Use materials that obey the current law.
- 12.- The connecting plug must be accessible in a fast and simple way to have a fast disconnection.
- 13.- Never touch the plug with wet hands. Also, disconnect always the device before handling the connections.
- 14.- Never put any heavy object over the device, since it could get damaged.
- 15.- If the device is going to remain some time without use, it is recommendable to disconnect it from the electrical net.
- 16.- The repairment and the maintenance of the device must be done by TV and radio specialised technicians.

1.2. Box content



Quick installation guide



2 x Bridge F male – F male



DC Cable



TWSQ 310 CI



Cable 12 cm PIN to PIN RJ45 – RJ45



Stopper



The TWSQ 310 CI will be provided with a double DVB-C output that will allow distributing the channels of the tuned transponders in two consecutive multiplex.

In order to configure the device we will have two selectable modules.

The options of configuration are independent. With the following exceptions:

- The output channel of the second module will be set automatically as the consecutive channel after the one configured in the first module.
- The output level of the multiplex will be set by the output level configured in the first module.

1.3. Description and connections

The module TWSQ 310 CI is used for the reception of free channels that obey the DVB-S / DVB-S2 standards. Each module allows the reception of 2 complete transponders in DVB-S (QPSK) / DVB-S2 (QPSK/8PSK), and the subsequent modulation in DVB-C (QAM) of it.


A feature of this equipment is its modulator in Vestigial Side Band (or VSB). This modulation can be used to distribute adjacent channels in one distribution without any intermodulation problem.

Each module has one Loop connector to cascade several modules at input and a Mix connector to do same in output channels. The output channel is selectable between C2 and C69.

All parameters are programmed by the means of PRO 201 or the EVO or MINI series of field strength meter, and they are monitored in the display of programmer or in the TFT screen of field strength meter.

TWSQ 310 CI has two Common Interface slots.

TWSQ 310 CI

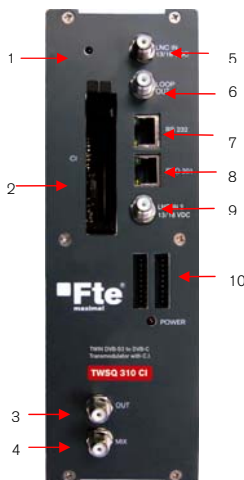

1. Two-colored led*: It indicates the different states of the device.
2. CI: 2x Common Interface
3. OUT: This connector supplies the modulated channel according to the selected standard in the module and mixes it with all the signals that it receives through the MIX connector
4. MIX: Input of mixing of the module.
5. LNC IN: To connect to the LNC or to the LOOP OUT output of the previous module
6. LOOP OUT: To connect to the ANT IN input of the next module.
7. RS 232: Ethernet connector to cascade modules with the RCM 310 telecontrol unit with the RJ45/RJ45 cable provided.
8. PRO 201: Ethernet connector to make the programming with the programmer.
9. LNC IN 2: Second input to connect to the LNC.
10. DC connectors: It has two connectors for input/output.

*States of two-colored leds

1. Initialization mode

- Green: main application charged.
- Blinking Green: Completing the initial sequence, at the moment when the module gets initialized, the led will turn into one of the states the operating mode.
- Red: Phase of initializing the module.




2. Operative Mode

- Green: The system is working properly.
- Orange: At least one critical event has been recorded in the module. The led will only change into green when the registration of events has been read by the programmer.
- Red: Error or alert detected in the running of the device, the led will be on only as long as the error/alert is present. Once the error or the alert disappears, the led will change into orange because the error/alert is stored in the registration of events.

3. Programming mode

- When the module detects an external programmer, the led will blink in the next sequence: green-orange-red.
- Once you leave the programming mode, the led will turn into the corresponding operating mode.

Stages of transmodulator TWSQ 310 CI

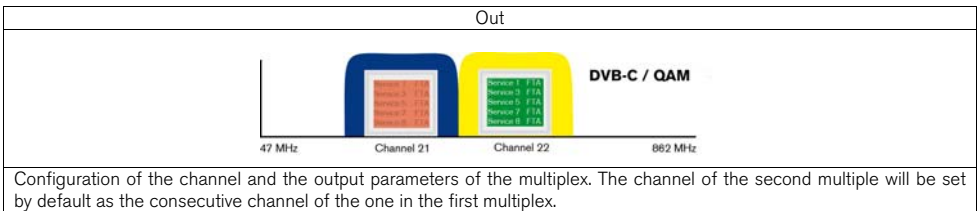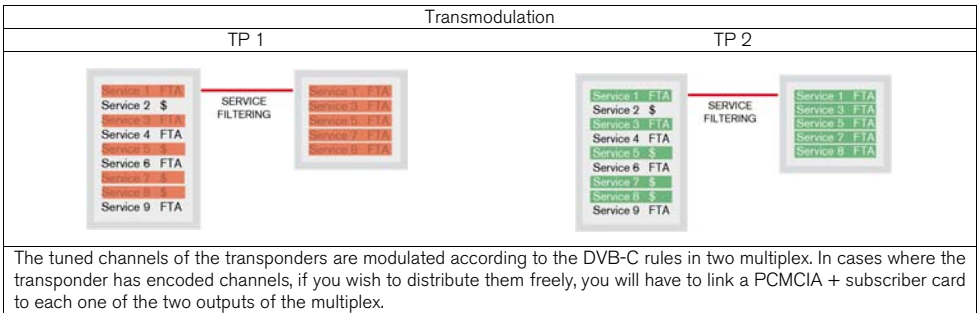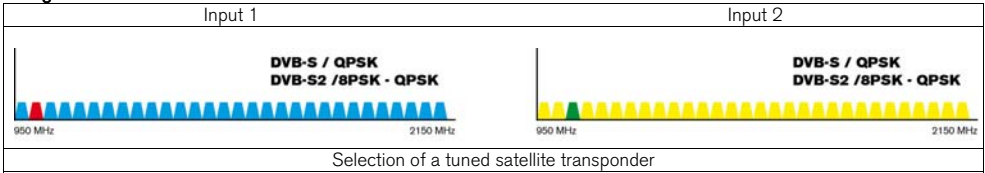

1.4. Programming

TWSQ 310 has two ethernet connectors. In order to make the programming of the module you have to connect the corresponding programmer to PRO 201 connector.

You can make the programming through the PRO 201 programmer and also through the mediaMAX EVO and mediaMAX MINI field strength meter.

1.4.1. Programming modes



1.4.2. Programming

Below you will find the steps to follow in order to make the programming both from corresponding EVO and MINI field strength meter as well as from PRO 201.

mediaMAX EVO / mediaMAX MINI

In order to start programming the TWSQ 310 transmodulator, you will have to go to "Tools" option through the key 8 of your field strength meter and to select the "Prog Transmodulators" option.



Then, it will proceed to recognize the module and to show the main menu. In the "Prog. Transmodulators" are shown the different configuration options that this tool offers:



1. Module selection


The field strength meter allows carrying out the programming of one or several transmodulators from an only transmodulator.



Without interconnection of modules.

An only module connected

It will allow you to choose between two units with an only device connected to the programmer (Unit 1 or Unit 2).

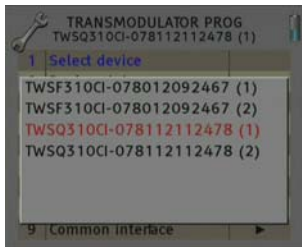


Interconnection of several modules, you can select which modules you wish to program.

2. State of the module

In the option "State of the module" are specified the main parameters of the module at this moment.

- Transmodulator input: It indicates whether the module is hooked or without signal.
- Input bit rate: Transfers of data in the satellite tuner input.
- Output bit rate: Transfer of data in the module output.
- BER before and after Viterbi: It indicates the error rate of bits of the input signal before and after the correction produced by Viterbi algorithm.
- MER: Parameter that indicates the quality of the input modulated digital signal, expressed in dB.
- Noise Margin: It indicates the difference between the value of current C/N and the value of C/N at the point of pixilation of the signal, that is, the quantity of dBs of C/N measure that are needed to lose the input signal.
- Temperature: It indicates the current temperature of the module in °C.
- Fan PWM: It points out the current efficiency of the fan of the device, indicated in %.

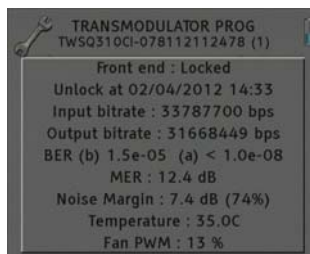

3. Input configuration

In this option you will be able to configure the input parameters of the satellite signal:

- Local oscillator: Selection of the local oscillator that you wish to use: FI, KU, C, K9750, K10000, K10600, K10700, K10750, K11250, K11300, K11325.
- Frequency (MHz): Transponder frequency that you wish to tune.
- Symbol speed: Symbol speed required by the transponder.
- Auto symbol rate: You will be able to select if the detection of the Symbol Rate is going to be Automatic (On) or Manual (Off).
 - In Manual mode (Off), the value of the Symbol Rate should be fixed by the user based on the provider's information.
 - In Automatic mode (On), the meter will automatically identify the SR when a Satellite carrier is tuned. This feature is very useful when the provider's information is unknown.

The SR value found will appear in the field of selection of the SR menu. This value found by the meter could not correspond exactly to the real broadcast SR, but to a very close value.




Note: The Automatic Symbol Rate feature does not work when the carrier quality is very poor or/and with a very low Power Level.

- DVB: This option allows selecting the standard DVB of the transponder that you want to tune. Options: DVB-S1, DVB-S2 and auto

- LNB Feeding: In this option you can set the parameters concerning the LNB:

- Voltage RF IN: 13V, 18V and Off.
- Tone 22 kHz: Off, and Auto. In the
- Switch DiseqC: A, B, C, D and Off.

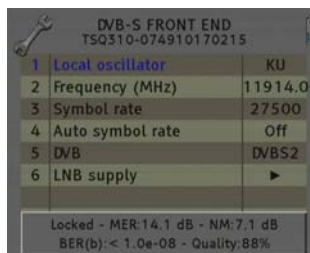

4. Modulator configuration

This option allows you to configure the DVB-C modulator that the device has.

- Symbol speed: The available symbol speed ranges from 1 to 6.96 MS/s.
In order to estimate the output symbol speed you have to take into account the following parameters: input modulation, input symbol speed, input FEC, output modulation.

For example, for a 8PSK signal with 22000 MS/s and a FEC 2/3, the output symbol speed should be calculated according to the chosen QAM modulation.

$$V_{SYMBOL.OUT} = \frac{V_{SYMBOL.IN} \cdot FEC(n^{bit} \cdot symbol(8PSK))}{n^{bit} \cdot symbol(QAM)} = \frac{22000 \cdot \frac{2}{3} \cdot 3}{n^{bit} \cdot symbol(QAM)}$$

Modulation	QPSK	8PSK	16 QAM	32 QAM	64 QAM	128 QAM	256 QAM
Number of bits per symbol	2	3	4	5	6	7	8

Modulation	16 QAM	32 QAM	64 QAM	128 QAM	256 QAM
Symbol speed (MS/s)	11000	8800	7333	6286	5500

- Spectrum inversion: Activate or deactivate the spectrum inversion in the modulation.
- Modulation: Modulation Format. Options: 16 QAM, 32 QAM, 64 QAM, 128 QAM, 256 QAM.
- Roll-off factor: Roll-off factor reduces the interference between symbols thanks to the raised cosine filtering, the bigger this value is, the less interference between symbols that will be caused. Typical Value according to rules DVB-C = 15 %. Options: 15 %, 13%.





5. Output configuration

In this option you can configure the different parameters of the cable signal.

- Channel standard: It allows you to select the channelling of the cable signal standards. Options: BG, BG, PAL BG IT, 11, M NTSC, PAL M, PAL N, PAL DK, PAL I, BB_AU, DK PAL, L PAL.
- Channel: Output channel of the cable modulation. When you select the output channel, the field "Frequency (MHz)" will be modified automatically, adapting itself to the selected channel. Options: C2-C69.
- Frequency (MHz): Output frequency of cable modulation. When you modify this field, the field "Channel" will be also modified, indicating the channel equivalent to the selected frequency in the case that this frequency corresponds to the frequency of a channel. Options: 47-862 MHz.
- Level: Regulation of the output level of the modulated signal. Options: 0-15dB.
- Calibration: Allows the realization of two tests in order to verify the correct running of the device.


- Output deactivate: It allows activating or deactivating the output of transmodulator.
- Pure carries output: It allows activating or deactivating the DVB-C modulation, allowing visualizing the carrier without modulation in the selected frequency.

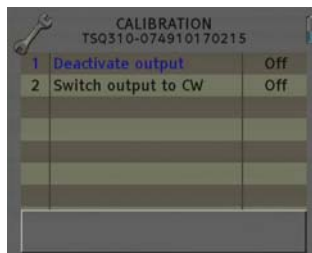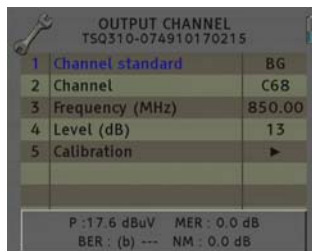


6. System

This option provides information of the transmodulator.

- System logfile: In this field are indicated the registered events in the module.
 - Read log: It allows reading the registered events in the module.
 - Clear log: It allows deleting all events stored until this moment.
 - Export log to USB: It allows you to export all events registered to the connected USB device.
 - NM low Limit (dB): An event of error will be recorded when the value of Noise Margin is lower than the set value.
 - NM high limit (dB): Once the event of error is recorded (Noise Margin < Limit Lower NM), this will be Noise Margin value that will have to be exceed so the module stops being in error.
 - Clear log all devices. It allows deleting the events report of all the interconnected modules.
- Factory default: This option restores the values by default of the transmodulator.
- System information: It allows you to visualize the basic information of the module: model, no of series, firmware version, etc.

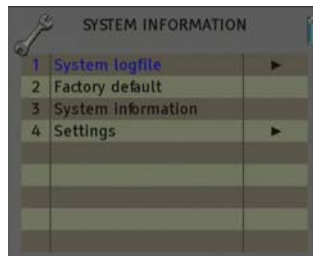

1	System logfile	▶
2	Factory default	
3	System information	
4	Settings	▶

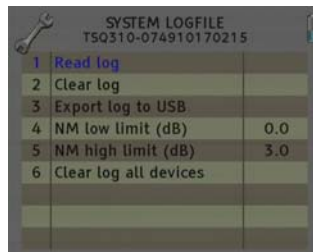

1	Read log	
2	Clear log	
3	Export log to USB	
4	NM low limit (dB)	0.0
5	NM high limit (dB)	3.0
6	Clear log all devices	

- Settings: This option allows saving and loading the configuration of the module, carrying out firmware update or making an adjustment of the time and date of the module.


- Clock:

- Set Date and time: Setting of the date and time of transmodulator. It is appropriate to maintain these parameters set in order to have the registration of errors linked to the current time and date.


- Set date/time all devices: Loading the current date and time of the module in the rest of interconnected modules.

- Alias:


- Write alias: It allows you to assign a name/alias to the module you are programming. Option only available when the Alias Auto option is configured as "none" (manual mode).
- Auto Alias: It allows configuring the name/alias of the modules automatically. Options: Channel, Frequency, Service, None.

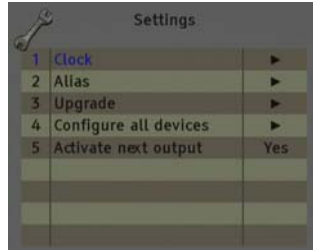

1	Clock	▶
2	Alias	▶
3	Upgrade	▶
4	Configure all devices	▶
5	Activate next output	Yes

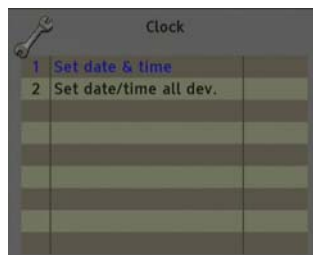

1	Set date & time	
2	Set date/time all dev.	

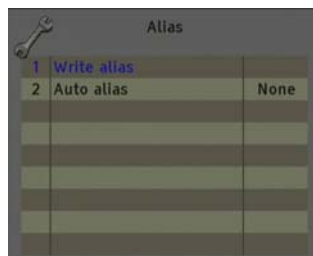

1	Write alias	
2	Auto alias	None


- Upgrade:

- Send Firmware from USB: It allows carrying out the firmware update from the USB device.
- Send firmware to all: It allows carrying out the update of all the modules that are interconnected at the same time.




- Configure all devices:

- Input values to all devices: It allows copying the current input configuration in all the interconnected modules.
- Modulator values to all devices: It allows copying the configuration of the current modulator in all the interconnected modules.
- Output values to all devices: It allows copying the current output configuration in all the interconnected modules.
- Factory default to all devices: It allows making values by default to all the interconnected modules.
- Activate next output: It allows activating or deactivating the output of the second unit.

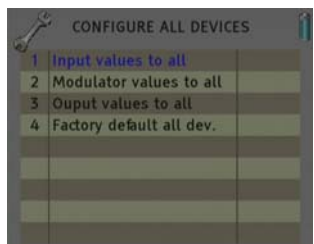

7. Program management

- New program: This option allows creating a program with the current configuration of a module or group of modules.
- Load program: It allows loading a previously created program on a module or group of modules.
- Delete program: It allows deleting a program.
- Device to process:
 - Current: The creation or loading of a program will be applied only in the module that is currently connected.
 - All: The creation or loading of a program will be applied to the whole group of connected modules.

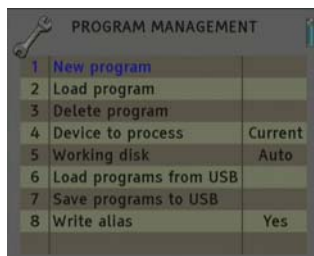

- Working disk: With this option we have the possibility of choosing if we want to work into the internal disk or in the external storage device USB 2.0.

Once the option is selected, a dialog box will appear and we will be able to choose among three different options:


- Auto: The Meter decides where the data will be stored. If there is external memory connected, the Meter will store the data in it. If not, it will use the internal memory.
- USB: The Meter always will try to use the external memory connected to the USB port. If this memory has not been connected an error message will be shown, reminding that there was an error storing the data and it will be not stored.
- Internal: Always the internal memory is used to store the data.
- Load programs from USB: This option allows importing programs from a USB memory to the field strength meter. Before using this option you must connect a USB memory.
- Save programs to USB: This option allows copying the programs stored in the external USB 2.0 storage device.
- Write Alias: It allows saving the alias of the module in the program. Options: Yes/No

8. Set Output Services

This option allows making the selection of the services that you wish to include in the output multiplex.

- Add/Remove services: It allows adding the services to the multiplex and also removing the ones previously included. The lower bar informs about the available space in the output multiplex. As you add more services, the space available will decrease.

Once you have tuned a transponder in the "Input Set Up" section and you have selected the DVB-C modulator configuration in the "Modulator Set Up" section, you can make the assignment of the services that are going to be included in the output multiplex "Adding/Removing services".

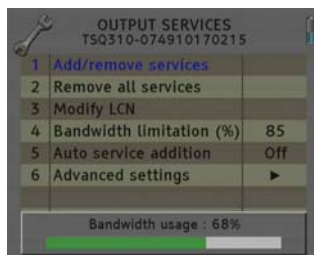


Adding services:




1. Select "Service to add" option
2. Select one of the transponder services you want to add.
3. Once you have chosen the service, select the "Add/Remove" button to include the service in the multiplex.



Note: It is not recommended to exceed the 85% of the maximum capacity of the multiplex due to the possible variability of the bits rate of the inputs services.

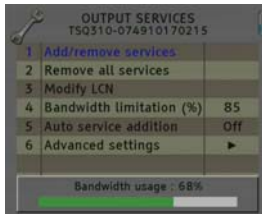


Recomendat capacity
(lower to 85%)

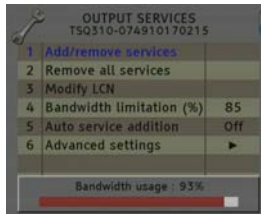

Excessive capacity
It is recommended to remove
services

Removing services:

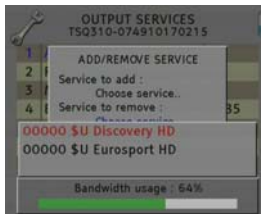




1. Select the "Service to remove" option.
2. Select one of the transponder services you want to remove.
3. Once you have chosen the service, select the "Add/Remove" button to remove the service in the multiplex.

- Remove all services: It allows removing all the services included in the multiplex.
- Modify LCN: The LNC function allows assigning automatically a predetermined position to each one of the services of the multiplex. This function will allow the users who have a receiver with LNC support to make the ordination of channels automatically.



Note: If in the existing installation there are already services that have LNC system, you will have to configure the position of the module services in order to avoid conflicts with other net services.

- Bandwidth limitation: It allows selecting the % of the capacity of the output channel.
- Auto service addition:
 - On: It selects the services automatically when an input carrier is tuned and when the list of selected services is empty. The receiver will have this state by default.
 - Always: It selects the services automatically every time a new input carrier is tuned. This state is only recommended to be used for making test in the module.
 - Off: The automatic mode is deactivated; the services have to be manually selected.
- Advanced settings:
 - Network: It allows making the adjustment of the identification parameters of the multiplex.
 - TS ID: Transport Stream identification value. It is recommended to configure a value different from TS ID for each one of the output multiplex configured.
 - Net ID: Net identification value
 - Original Net ID: Original net identification value
 - Network Name: Name associated with the net.
 - Tables: It allows modifying the value of the following information tables of the DVB, NIT, SDT and PAT services.

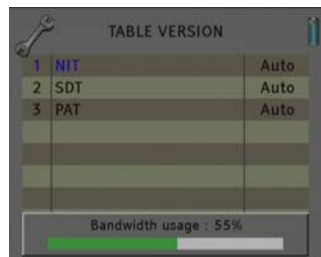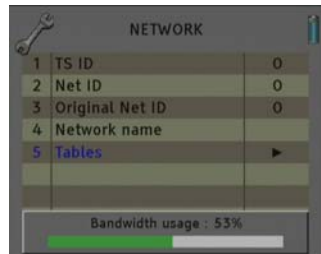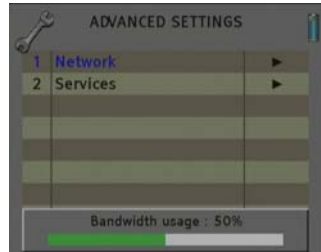

- Services:
 - Change service name: It allows changing the name of the service manually. In order to do so, please choose the service in the first line and then write the new name in the second line. Then you have to press "modify" in order to save the changes.



- HDSimulCast: In cases where we receive in an installation the same channel in high definition and in standard definition, the HD Simulcast function allows to exchange the position of the LNC of both channels. If the user has a device compatible to HD Simulcast and the module has been correctly configured, when tuning the standard definition channel, it will move to its position in high definition automatically.

This option allows modifying manually the position of the LNC, exchanging the standard position into the high definition position. In the first line you have to select the high definition service and in the second line you have to select the same service but in standard definition.

- Change in Service ID: From this position you can change the PID Number of the chosen service.



Next it is attached the identification table (NID/ONID) of the main satellites. You will be able to find more information in the law ETSI TR 101 162 v1.2.1.

Satellite	Net ID	Original Net ID	Description
Hotbird 13°E (Eutelsat 13°E)	318	318	Eutelsat 13°E System
Astra 19,2°E	1	1	Astra Satellite Network 19,2°E
Astra 23°E	3-25	3-25	Astra n (n=1-23)
Astra 28,2°E	2	2	Astra Satellite Network 28,2°E
Nilesat 7°W	2048	2048	Nilesat 101
Hispasat 30°W	33	33	Hispasat Network 1

9. Common Interface

This option allows checking the information and configuring the parameters regarding the conditional access.

- Selecting Slot: It selects the Slot where the CAM for decoding the services is inserted.

- CI Menu: From here you can reach the menu of the card inserted in the CAM.

- Decrypted: From this option you can add or remove manually the services that are being decoded by the card.


- Deactivating all decrypted: From this option you can remove all the services that are decoding the conditional access card.

- CAM Reset: It allows making a reset in the CAM.

- Watchdog CAM: In cases where the encoded services stop working you can use one of the following options.



- Deactivate: No actions will be made in the CAM.
- Update: When it is detected that the decryption of the CAM has been lost, the rights will be sent systematically until the decryption gets back.
- Reset: As soon as the loss of decryption of the CAM is detected, a reset will be made.
- Both: Once the loss of decryption of the CAM is detected, the rights will be sent several times until the decryption gets back. In cases where it does not get back the module will make a reset of the CAM.
- CAM Reset after: It makes a reset of the CAM after a set period of time.
Options: 0, 5 min, 10 min, 15 min
- CI daily reset: By activating this option we will be able to make a daily reset of the CAM.
- CI daily reset time: Time when the CAM resets in case the "CI daily reset" option is activated.
- Activated slots: It allows selecting the CAM modules that should get a reset, in case the "CI daily reset" option is activated.

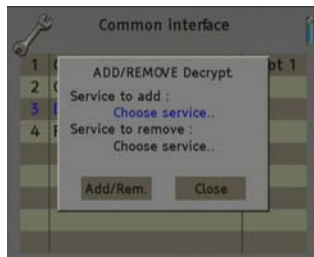


PRO 201



Note: From PRO 201 programmer you can only carry out the programming of a single module, in order to carry out the programming of several modules at the same time you have to use a mediaMAX EVO or mediaMAX MINI series field strength meter.

When you connect the PRO 201 programmer, it will proceed to recognize the module and to show the main menu. In the main menu are shown the different options for configuring the transmodulator.

We have to use the "Up" and "Down" buttons of the keyboard in order to move to the different options, and to get into the submenus we have to press "OK" button.

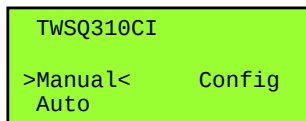


1. Manual

Inside the "manual" menu there are specified the different options for setting up the input, output and modulation parameters.




Note: It will allow you to choose between two units with an only device connected to the programmer (Unit 1 (Mux 0) or Unit 2 (Mux 1)).

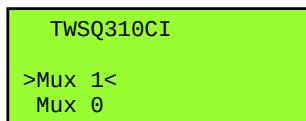

1. This field shows the type of parameter that is selected at the moment. Options: Input Sat, Out Cab, Out TV.


2. This field shows the parameter that is selected. In order to move around the different options we have to use the "Up" and "Down" buttons of the keyboard. Click on OK to edit the selected parameter and Right/Left for changing it. Once it is configured press OK.

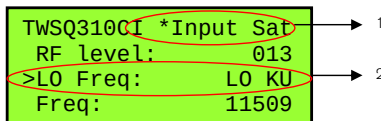

Satellite input (Input Sat)

In these options you will be able to configure the input parameters of the satellite signal:

- L.O. freq (Local oscillator): Selection of the local oscillator that you wish to use: FI, KU, C, K9750, K10000, K10600, K10700, K10750, K11250, K11300, K11325.

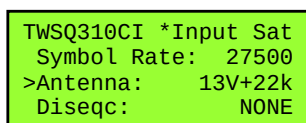

- Freq (Input Frequency (MHz)): Transponder frequency that you wish to tune. In order to introduce the frequency, press the "OK" button and the cursor will be placed over the frequency. With the keys of the cursor, we can move through all the digits and change the values. Press "OK" in order to save the value.

- Symbol Rate: Symbol speed required by the transponder. In order to introduce the symbol rate, press the "OK" button and the cursor will be placed over the frequency. With the keys of the cursor, we can move through all the digits and change the values. Press "OK" in order to save the value.

- Antenna: Feeding/ tone towards the LNC. Options: 0V, 13V, 13V+22kHz, 18V, 18V+22KHz, 13V+AUT, 18V+AUT.

- DiseqC: In this option you can set the DiseqC configuration: A, B, C, D and None.

- Auto SR (Auto Symbol Rate): You will be able to select if the detection of the Symbol Rate is going to be Automatic (On) or Manual (Off).

- In Manual mode (Off), the value of the Symbol Rate should be fixed by the user based on the provider's information.

- In Automatic mode (On), the meter will automatically identify the SR when a Satellite carrier is tuned. This feature is very useful when the provider's information is unknown.

The SR value found will appear in the field of selection of the SR menu. This value found by the meter could not correspond exactly to the real broadcast SR, but to a very close value.



Note: The Automatic Symbol Rate feature does not work when the carrier quality is very poor or/and with a very low Power Level.

- Mode: This option allows selecting the standard DVB of the transponder that you want to tune. Options: DVB-S1, DVB-S2 and auto.

Cable modulator (Out Cable)

This option allows you to configure the DVB-C modulator that the device has.

TWSQ310CI *Out Cable
Modulation: 64
>Roll-off: 1.5
Symbol speed: 1000

- Spectrum inversion: Activate or deactivate the spectrum inversion in the modulation.

- Modulation: Modulation Format. Options: 16 QAM, 32 QAM, 64 QAM, 128 QAM, 256 QAM.

- Roll-off factor: Roll-off factor reduces the interference between symbols thanks to the raised cosine filtering, the bigger this value is, the less interference between symbols that will be caused. Typical Value according to rules DVB-C =15 %. Options: 1.5, 1.3.

- Symbol speed: The available symbol speed ranges from 1000 to 7000 S/s.

In order to estimate the output symbol speed you have to take into account the following parameters: input modulation, input symbol speed, input FEC, output modulation.

For example, for a 8PSK signal with 22000 MS/s and a FEC 2/3, the output symbol speed should be calculated according to the chosen QAM modulation.

$$V_{SYMBOL.OUT} = \frac{V_{SYMBOL.IN} \cdot FEC \cdot (n^{bit-symbol}(8PSK))}{n^{bit-symbol}(QAM)} = \frac{22000 \cdot \frac{2}{3} \cdot 3}{n^{bit-symbol}(QAM)}$$

Modulation	QPSK	8PSK	16 QAM	32 QAM	64 QAM	128 QAM	256 QAM
Number of bits per symbol	2	3	4	5	6	7	8

Modulation	16 QAM	32 QAM	64 QAM	128 QAM	256 QAM
Symbol speed (MS/s)	11000	8800	7333	6286	5500

Output configuration (TV output)

In these options you can configure the output parameters of the terrestrial signal.

TWSQ310CI *Out TV
>RF Channel: 474000
RF Level: 013

- RF Channel (MHz): Output frequency of terrestrial modulation. In order to introduce the frequency, press the "OK" button and the cursor will be placed over the frequency. With the keys of the cursor, we can move through all the digits and change the values. Press "OK" in order to save the value. Options: 47-862 MHz.

- RF Level: Regulation of the output level of the modulated signal. Options: 0-15dB.

Summary table:

Satellite input	Cable output	TV output
- L.O. frequency - Input Frequency - Symbol Rate - Antenna - Diseqc - Symbol rate auto - DVB Mode	- Invert (Spectrum Inversion) - Modulation - Roll-off factor - Symbol speed	- RF Channel - RF Level

2. Auto

This option allows saving and loading the configuration of the module in the PRO 201 programmer.

TWSQ310CI

> *Read from Module*
*Write to Module *

- Read from module: It stores the current configuration of the module in the memory of the programmer. The steps to make a correct reading of the headend are specified below:

TWSQ310CI

> *Read from Module*
*Write to Module *

TWSQ310CI

CFG:03

Free position

TWSQ310CI

Operation finish

1. Select the option "Read from module" through Up/Down buttons. Press OK to continue

2. Select the position of "CFG" memory where you wish to save the current configuration of the module.

3. A window will appear and it will let you know that the reading made has been correct

- Write to module: It loads in the module one of the configurations previously saved in the memory of the programmer. The steps to make a correct configuration of the headend are specified below:

TWSQ310CI

> *Write to Module*
Read from Module

TWSQ310CI

CFG:01

Freq:11362 Sr:27500
Output Freq:850000

TWSQ310CI

Operation finish

1. Select the option "Write to module" through Up/Down buttons. Press OK to continue

2. Select the position of the "CFG" memory that you wish to copy in the module. Please verify that the data of the selected memory correspond to the channel that you wish to copy. Through the up/down keys, it commutates between the 2 units of the module (Mux 0 / Mux 1)

3. A window will appear and it will let you know that the configuration made has been correct

3. Config

In "Config" option the information concerning the transmodulator is given.

TWSQ310CI

LCN

>Read LOG file
Delete LOG file

- Read log: It allows reading the registered events in the module.

```
TWSQ310CI
LCN
>Read LOG file
Delete LOG file
```

```
TWSQ310CI
OK to Show LOG
```

```
TWSQ310CI
N:00001    Status:03
07/02/11   09:05:02
Front-end lock
```

1. Select the option "Read LOG file" through Up/Down buttons. Press OK to continue

2. Press OK again to show the log file.

3. A new window will appear. It will show the information about the registered events in the module. Press the following keys in order to scroll up and down the screen: "up/down".

- Delete LOG file: It allows deleting all events stored until this moment.

- Factory default: This option restores the values by default of the transmodulator.

- Update FW: It allows carrying out the firmware update from the programmer.

- ⁽¹⁾ Network Name: Name associated with the net.

- ⁽¹⁾ TSID: Transport Stream identification value. It is recommended to configure a value different from TS ID for each one of the output multiplex configured.

- ⁽¹⁾ NID: Net identification value

- ⁽¹⁾ ONID: Original net identification value

- ⁽¹⁾ Output services: This option allows making the selection of the services that you wish to include in the output multiplex. Once you have tuned a transponder and you have selected the DVB-T/DVB-H modulator configuration, you can make the assignment of the services that are going to be included in the output multiplex "Adding/Removing services".

- Add Services

```
TWSQ310CI
BW usage      000%
Delete services
>Add services
```

```
TWSQ310CI
Input          035 %
PID:06200 arte HD
+Add
```

```
TWSQ310CI
Operation finish
```

1. Select the option "Add services" through Up/Down buttons. Press OK to continue.

2. Select one of the transponder services you want to add, through Left/Right keys and select the "+Add" button to include the service in the multiplex

3. A window will appear and it will let you know that the operation made has been correct.

- Delete Services

```
TWSQ310CI
BW usage      083%
>Delete services
Add services
```

```
TWSQ310CI
Input          083 %
PID:06000 Das Erste
-Rem          --All
```

```
TWSQ310CI
Operation finish
```

1. Select the option "Delete services" through Up/Down buttons. Press OK to continue.

2. Select the service you want to delete with the Left/Right keys. Then press OK over "-Rem" in order to remove it, or press OK over "--All" in order to delete all the services of the multiplex.

3. A window will appear and it will let you know that the operation made has been correct.



Note: It is not recommended to exceed the 85% of the maximum capacity of the multiplex due to the possible variability of the bits rate of the inputs services.

Note:

⁽¹⁾ You have to select in which one of the two modules you want to make the configuration in each case.

- ⁽¹⁾ Change service name: It allows changing the name of the service manually.
- ⁽¹⁾ LCN: The LNC function allows assigning automatically a predetermined position to each one of the services of the multiplex. This function will allow the users who have a receiver with LNC support to make the ordination of channels automatically.

Select a channel through Left/Right buttons and introduce the position. Press the "OK" button and the cursor will be placed over the number. With the keys of the cursor, we can move through all the digits and change the values. Press "OK" in order to save the changes

TWSQ310CI

LCN:00004 arte HD




Note: If in the existing installation there are already services that have LNC system, you will have to configure the position of the module services in order to avoid conflicts with other net services.

- ⁽¹⁾ Decrypt services: From this option you can add or remove manually the services that are being decoded by the card:
 - Delete services
 - Add services
- CAM Reset : It allows making a reset in the selected CAM.
- CI menu: From here you can reach the menu of the card inserted in the CAM.
- Date / Hour: Setting of the date and time of transmodulator. It is appropriate to maintain these parameters set in order to have the registration of errors linked to the current time and date.
- SW version info: It allows you to visualize the basic information of the module: model, firmware version, etc.
- MUX number: It configures the number of output multiplex. Options: 1 or 2.
- Global Update: It allows carrying out the update of all the modules that are interconnected at the same time.

1.5. Accessories and example of installation

Example of installation

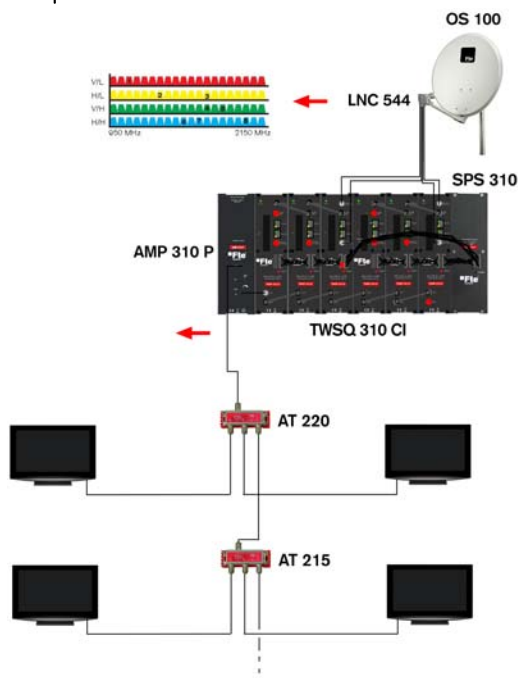

Installation that consist of 6 TWSQ 310 CI and that will allow tuning channels up to 12 different transponders and to distribute them through a network of modulated cable in DVB-C. The distributed channels need a cable receiver in order to be decoded. In order to distribute the encoded channels freely you have to install the PCMCIA + subscriber card in the Common Interface slot.

Note:

- ⁽¹⁾ You have to select in which one of the two modules you want to make the configuration in each case.




The number of modules that can be fed by the power supply SPS 310 will depend on the number of CAM's and their consumptions:


- If the total amount of modules that are connected to the power supply have two CAM's inserted, the SPS will be able to feed only 5 modules.
- In any other case, the power supply will be able to feed 6 modules.
- From the 4th installed module on, it is necessary to use the long bus cable for the feeding. The three first modules are fed with short bus cables



The power connection between modules using the bus cables requires rolling the cables to minimize radiations effects.



In order to guarantee the right running of the different equipments of the installation, we recommend you to provide the inputs and outputs which are not used with a 75Ω load.

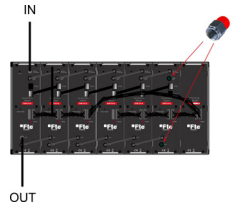

Accessories



Programmer
Mod. PRO 201
Code 2003123



High Definition field strength meter
Mod. mediaMAX MINI S2CT HD
Code 3001048



Field strength meter
Mod. mediaMAX MINI S2T
Code 3001026



Parabolic antenna OS series
Mod. OS 100 AL
Code 0701100



Wide band amplifier 47-862MHz
Mod. AMP 310 P
Code 2003520



Mixer
Mod. MUX 310
Code 2003518

Chapter 2. Technical features

Ref.	TWSQ 310 CI
Code	2003564
Input frequency margin	950-2150 MHz
Input level	-25 a -65 dBm
Input impedance	75Ω
LNB (feeding/commutation)	13V-18V / 0-22kHz
Input connector	2 x Female F connector
Input LOOP losses	<1 dB
FEC	1/2, 2/3, 3/4, 5/6, 7/8, 8/9, 9/10, 1/4, 1/3, 1/5, 2/5, 3/5, 4/5 DVB, RS 204,188
Input modulation	8PSK, QPSK
Input Symbol Rate	DVB-S:1-45 MS/s / DVB-S2:1-37 MS/s
Modulation Error Ratio (MER)	Typ. 40 / Min. 36
Selectable format of output modulation	16 QAM, 32 QAM, 64 QAM, 128 QAM, 256 QAM
Output symbol Rate	1-6,96 MS/s
Roll-Off Factor	13 %,15%
Output channels	Mux 1: C2-C69 / Mux 2: Consecutive channel to mux 1
Output connectores	Female F connector
Output Level	80 dBuV
Regulation margin	15 dB
MIX Losses	<1 dB
Band spurious	-60 dBc
Programming Interface	RJ-45
Programmer	PRO 201, media Max EVO and media Max MINI
Common Interface	Yes, 2 slots
Operating temperature	0°C-45°C
Consumption 5V (mA)	650
Consumption 12V (mA)	580
Consumption 24V (mA)	47
Consumption 30V (mA)	2
Dimensions	75x265x150 mm
Weight	1,5Kg

Chapter 3. Declaration of conformity



CONFORMITY DECLARATION

"WE , FTE MAXIMAL, DECLARE THAT THE PRODUCT
TWSQ 310 CI
IS IN CONFORMITY WITH FOLLOWING DIRECTIVES
Low Voltage Directive 2006/95/EC
EMC Directive 2004/108/EC"

If you wish a copy of the conformity declaration, please contact to the company



ESPAÑA

Mogoda, 110
Pol. Industrial Can Salvatella
08210 Barberà del Vallès
(Barcelona) España
Tel. 00 34 93 729 27 00
Fax. 00 34 93 729 30 73
fitemaximal@fitemaximal.com
www.fitemaximal.com

FRANCE

16 ZAE Les Mouilles
74570 Groisy
Tel. 00 33 450 68 80 17
Fax. 00 33 450 68 84 68
sav@fitemaximal.fr
www.fitemaximal.com

ITALIA

Via Edison, 29
42040 Calerno di
Sant'Ilario d'Enza (RE)
Tel. 00 39 05 22 90 97 01
Fax. 00 39 05 22 90 97 48
fte@fte.it
www.fitemaximal.com

DEUTSCHLAND

BCN Distribuciones S.A. Unipersonal
Zweigniederlassung Deutschland
Auf der Höhe, 8
44536 Lünen
Deutschland
Tel. 00 49 (0) 23 18 78 5 - 01
Fax. 00 49 (0) 23 18 78 5 - 200
info@fitemaximal.de
www.fitemaximal.de

PORTUGAL

Rua José Carlos Ary dos Santos
A-das-Lebres (Loures)
2670-791 Santo Antão do Tojal
Tel. 00 351 219 83 87 00
Fax. 00 351 219 83 87 09
fitemaximal@fitemaximal.pt
www.fitemaximal.com

UNITED ARAB EMIRATES

P.O.Box 262442
Jebel Ali Free Zone
Warehouse FZS5AB03
Dubai
Tel. 00 971 4 886 5700
Fax. 00 971 4 886 5701
www.fitemaximal.ae